

# INTERNATIONAL POINT OF SALE

## Installation instructions for the EPSON TM T81M Printer with Corner Store POS



Corner Store POS supports Epson TMT 81M printers and cash drawers. This document will detail the process of installing the correct drivers for the printer and cash drawer and then setting up the printer and cash drawer in Corner Store POS.


## Installing Appropriate Drivers

**NOTE: Please leave printer disconnected for driver installation!**


1. Start by running the setup.exe installer file, which can be downloaded at:  
<http://www.cornerstorepos.com/downloads/hardware/OPOSADK270E.exe>
2. At this initial screen, select Run.




3. Now, the file has to be unzipped. Please select any folder to download the file, and then click on Unzip.

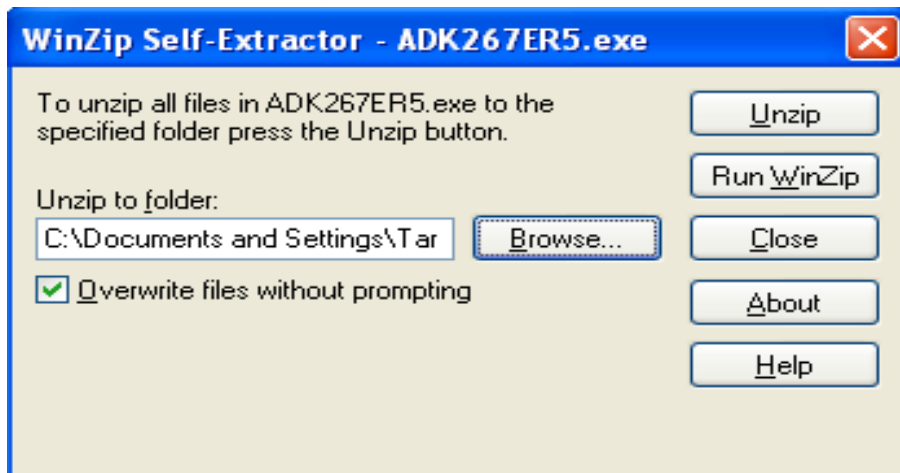


- Once the file is unzipped, now click on OK.

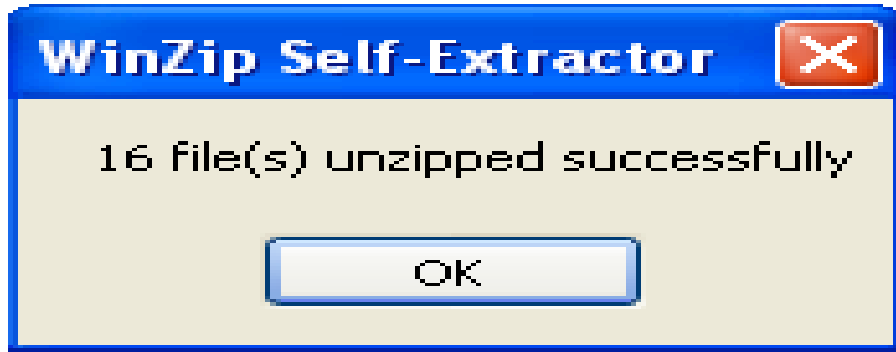


- Now go to the folder where the file has been unzipped. And look for the setup.exe file and execute it by clicking on it.

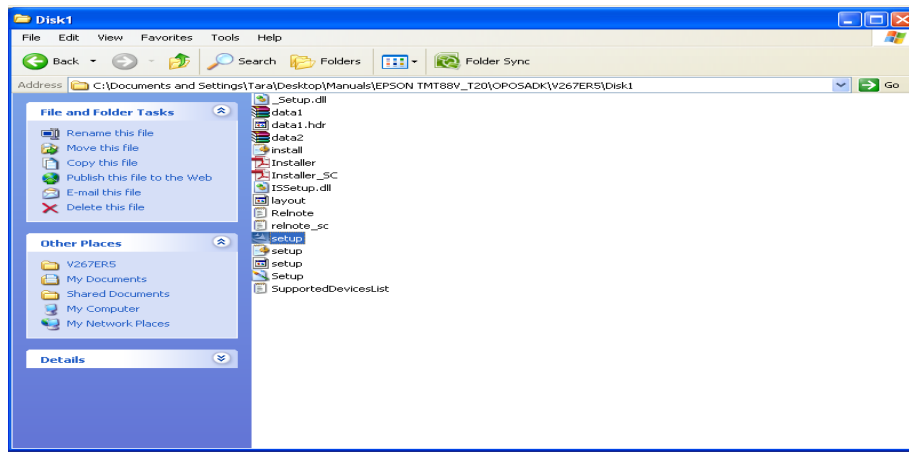


- Next, click on OK.

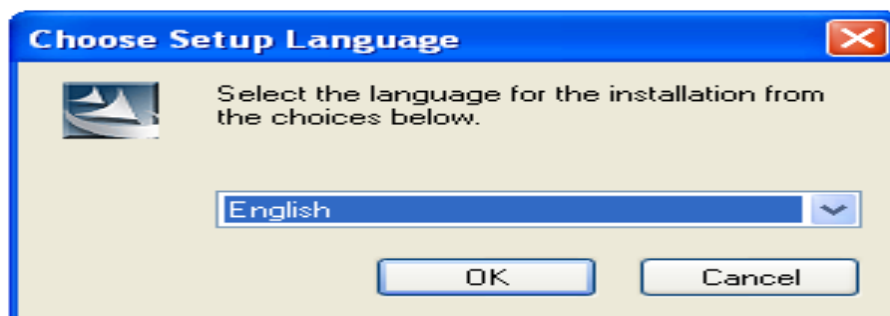


7. Now click on Next.

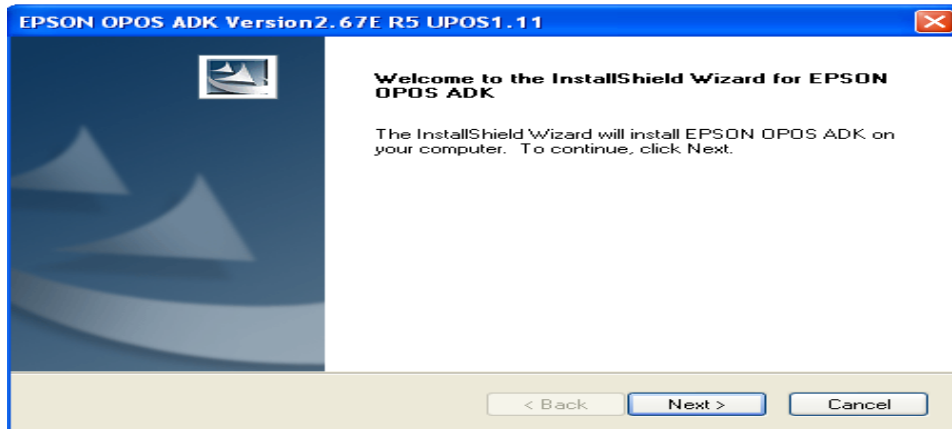


8. Select the option, 'I accept the terms of the license agreement', and then click on Next.

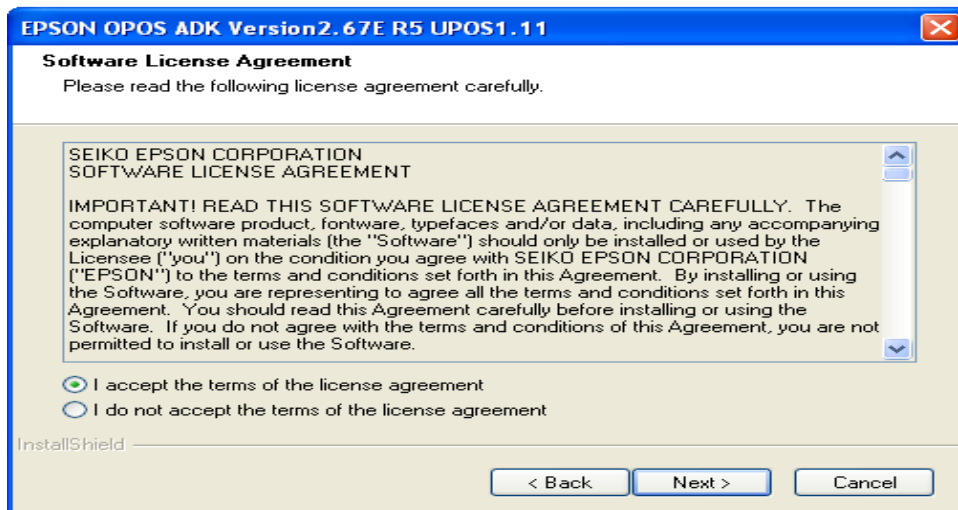


9. Now, click on Next.

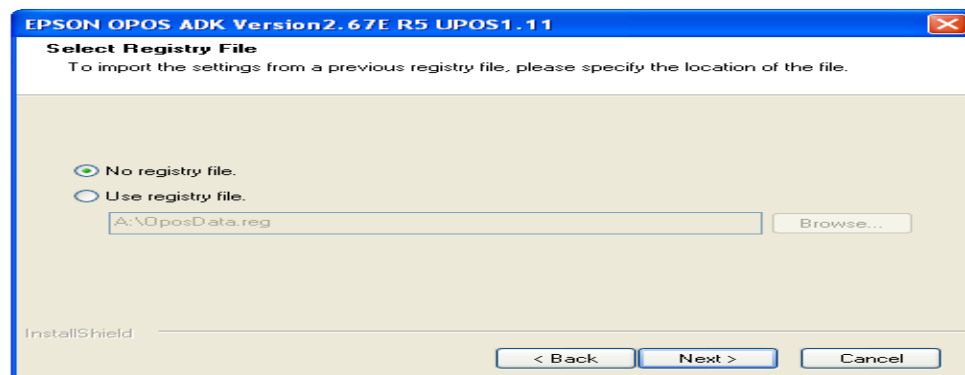


10. Select Next.

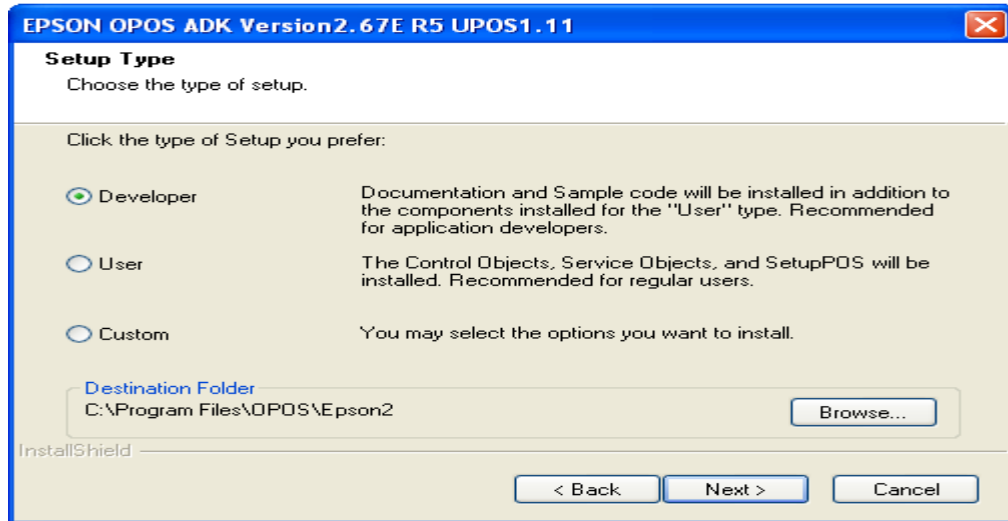


11. Again, select Next.

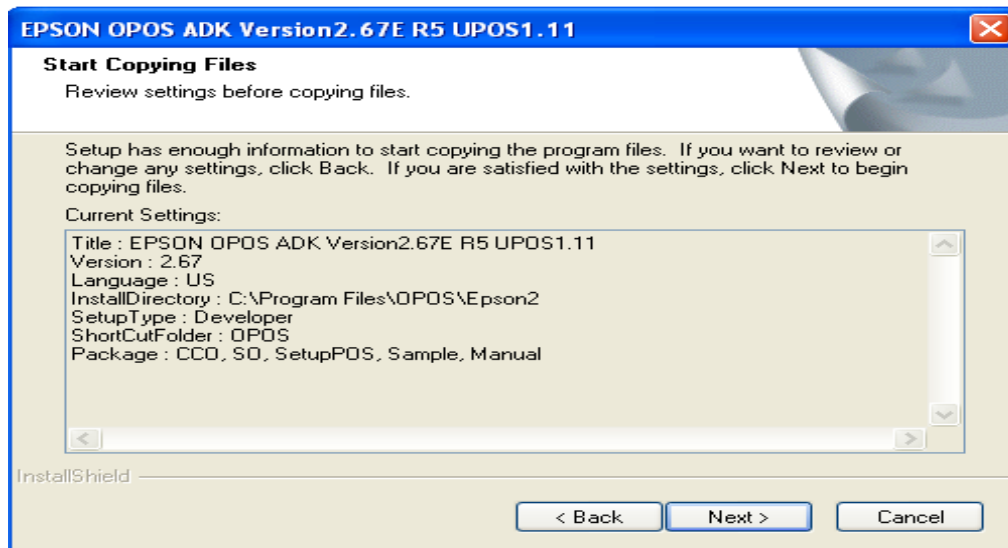


12. Select USB port and then click on Next.

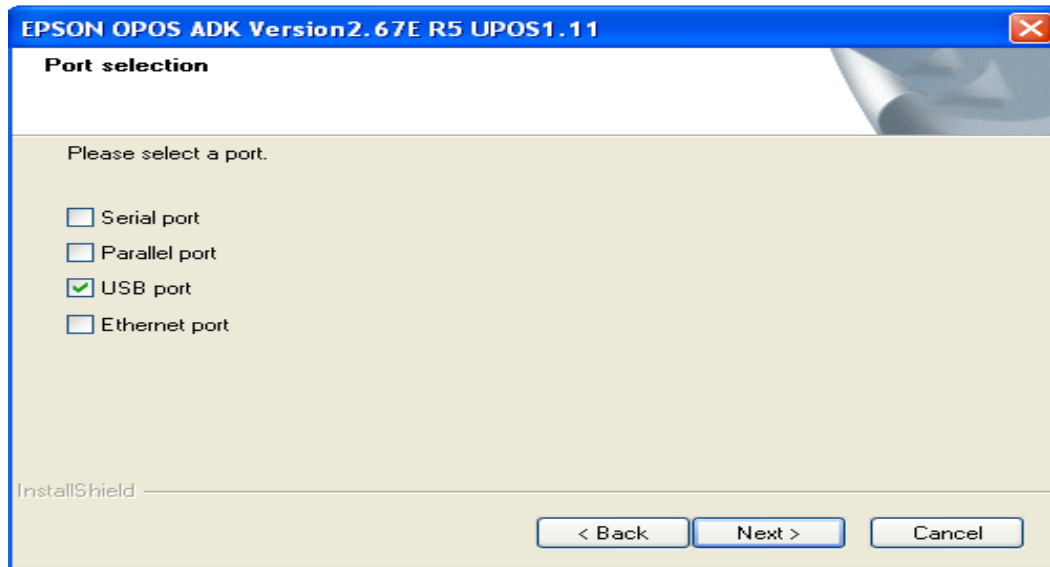

13. Setup is configuring and installing the software.

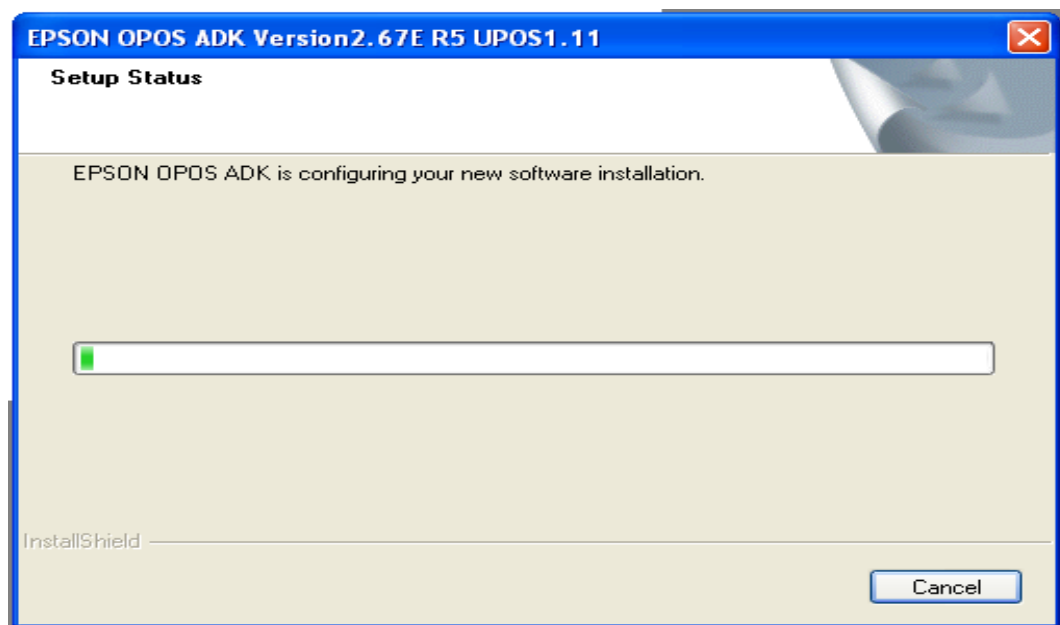


14. The installation is complete. Click on Finish.

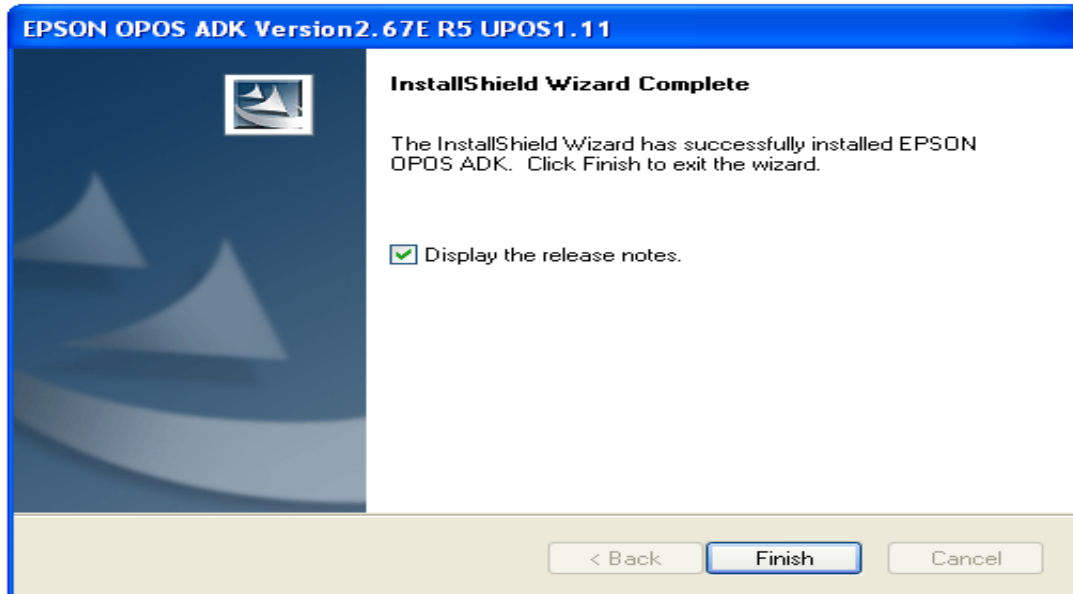


15. Now, EPSON OPOS Utility window opens.


16. Now, right click on the POS Printer and select Add New Device.

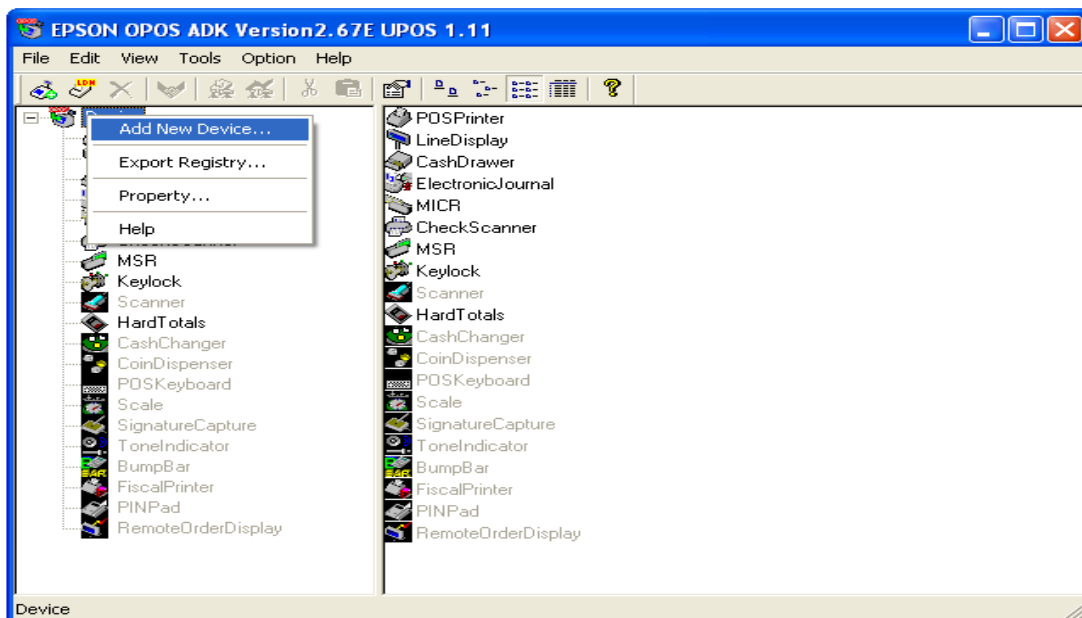

17. A new window, Add New Device opens.

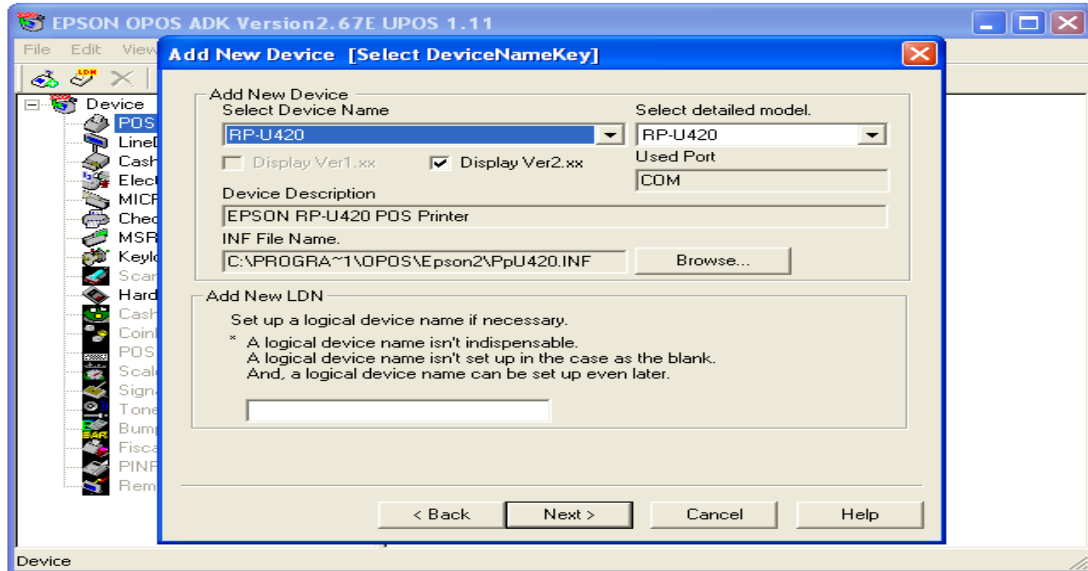


18. Now, select from Select Device Name, TM-T81M and then click on Next.

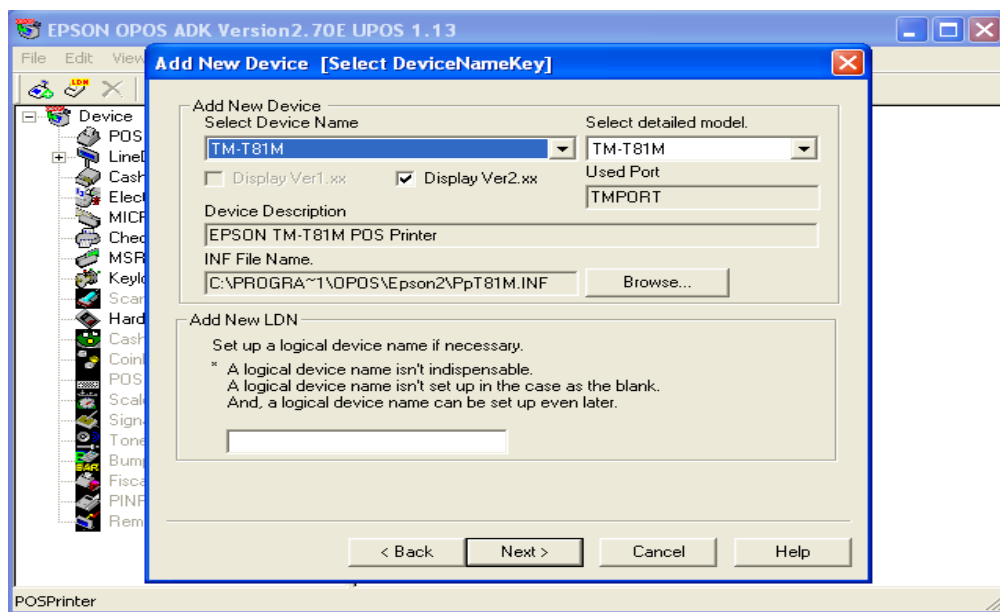





19. Click on the Check Health Interactive to check if the printer is working.

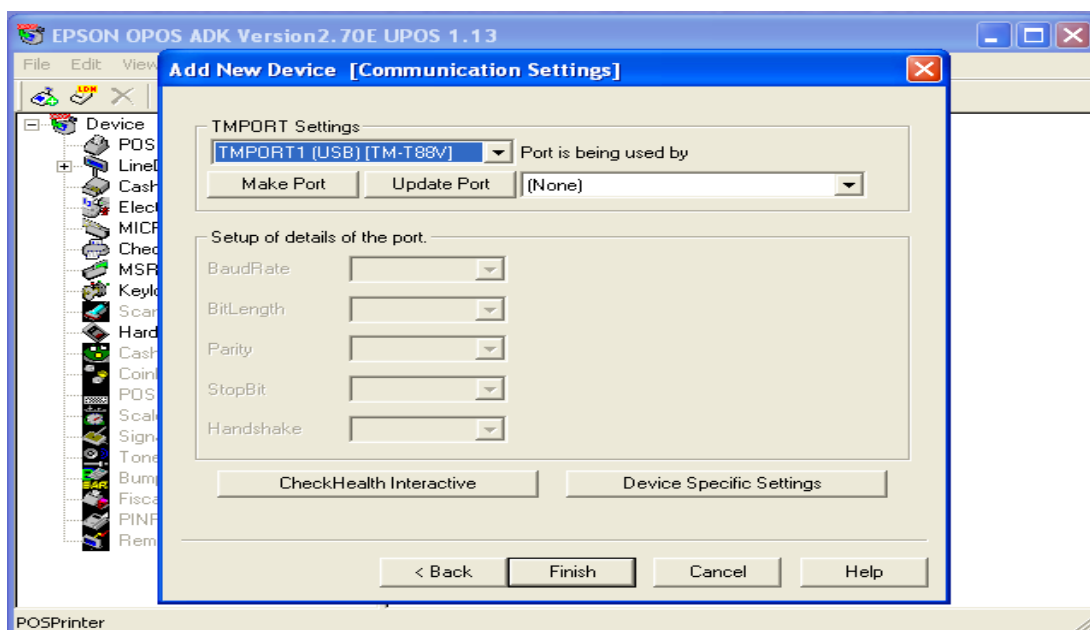


20. Click on Start button. Printer must work.

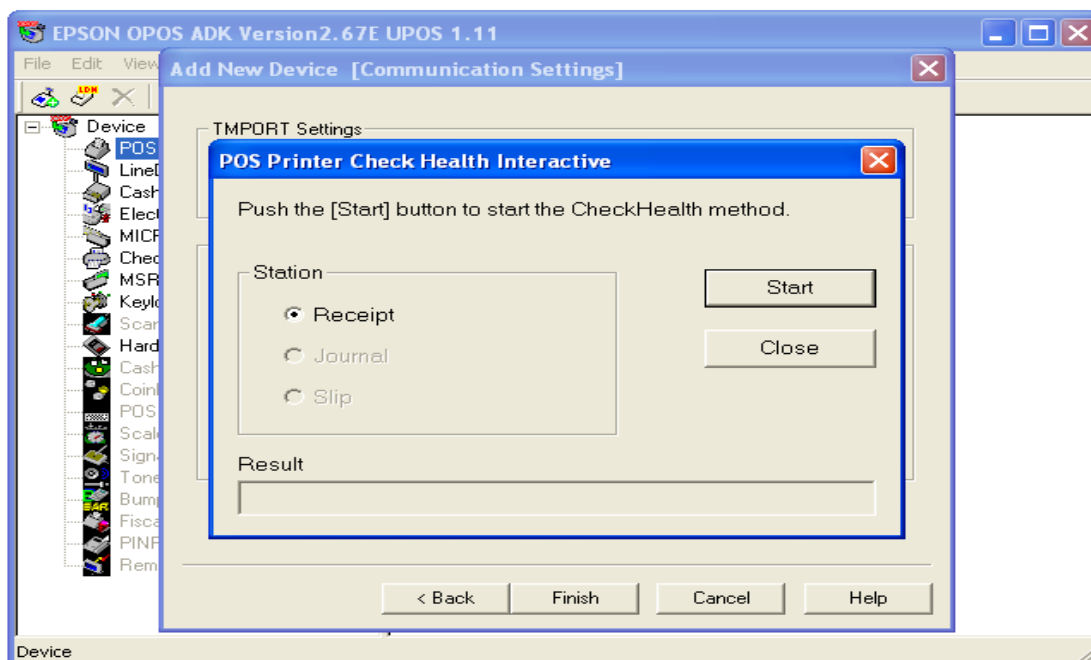


21. Once this done, you get a message in the Result as OPOS\_SUCCESS. Now, click on Close button.

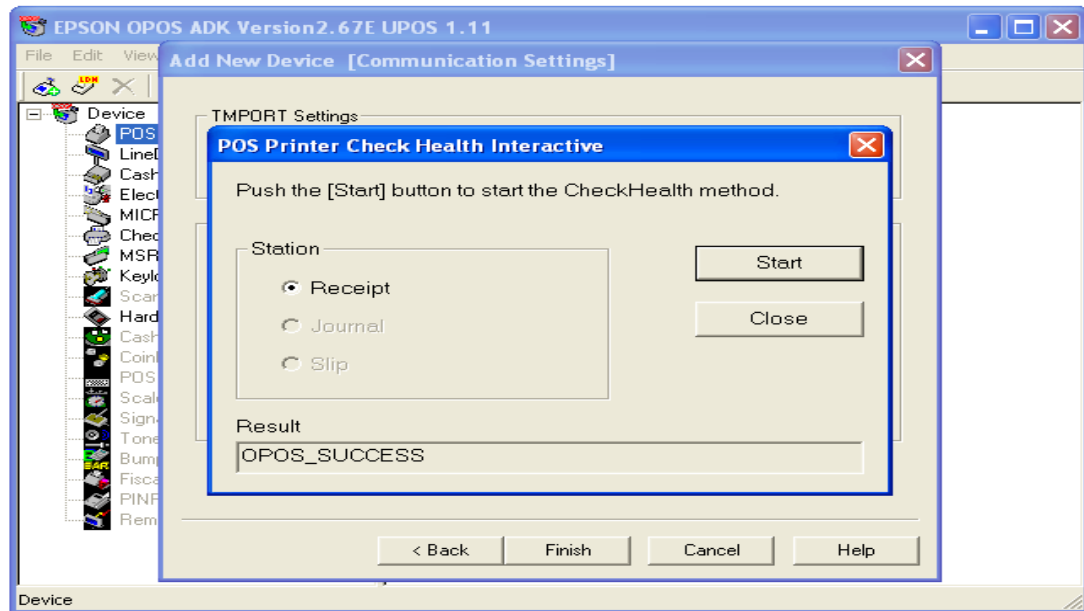


22. Message is shown that CheckHealth was successful. Now, click on OK.

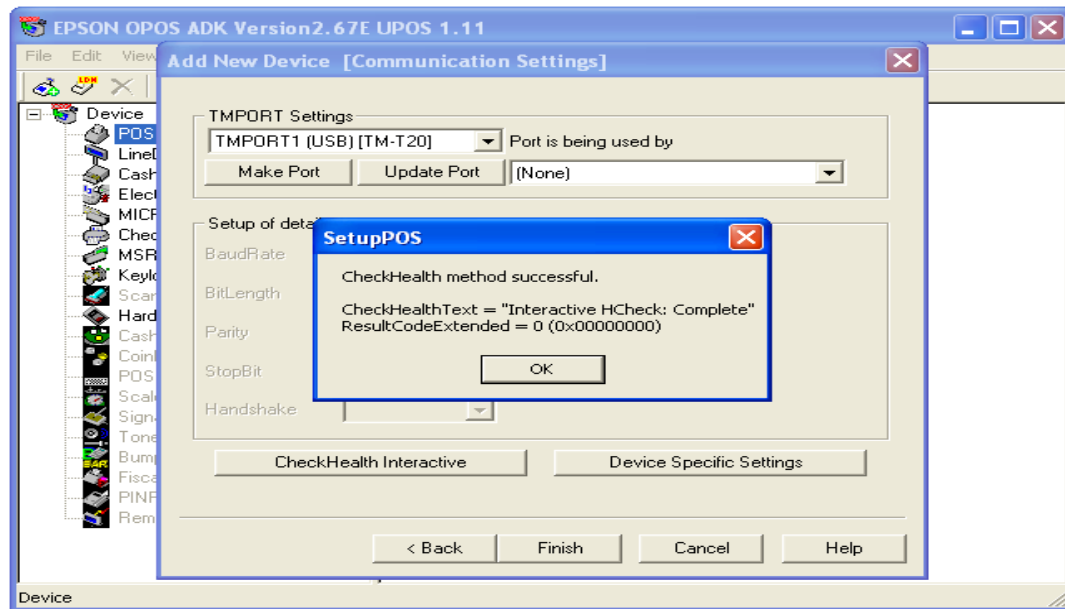


23. Click on Finish.

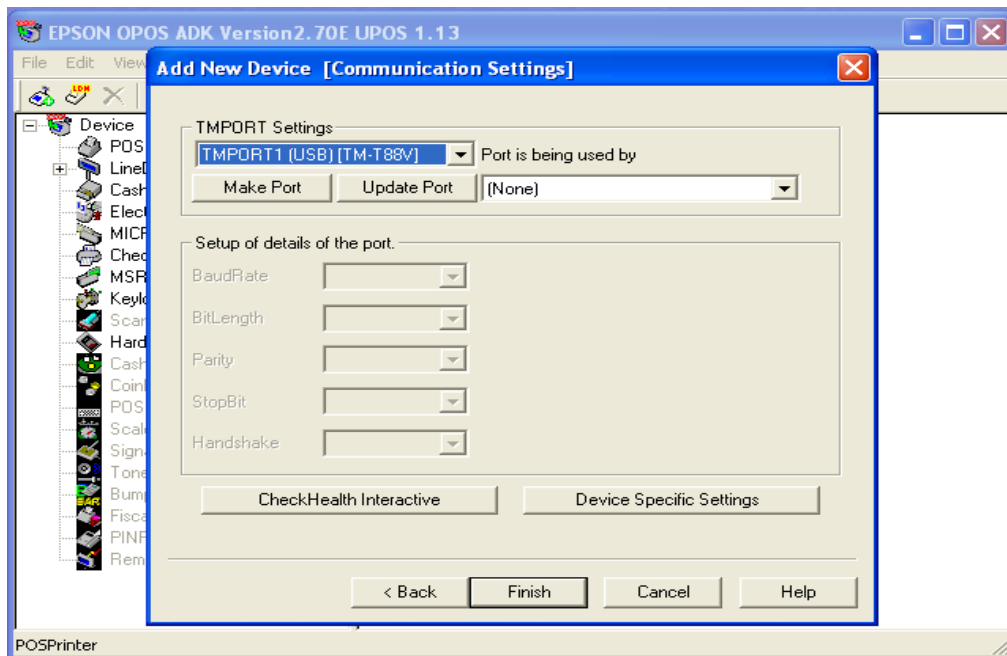


24. Now, note that TM-T81MU is configured.

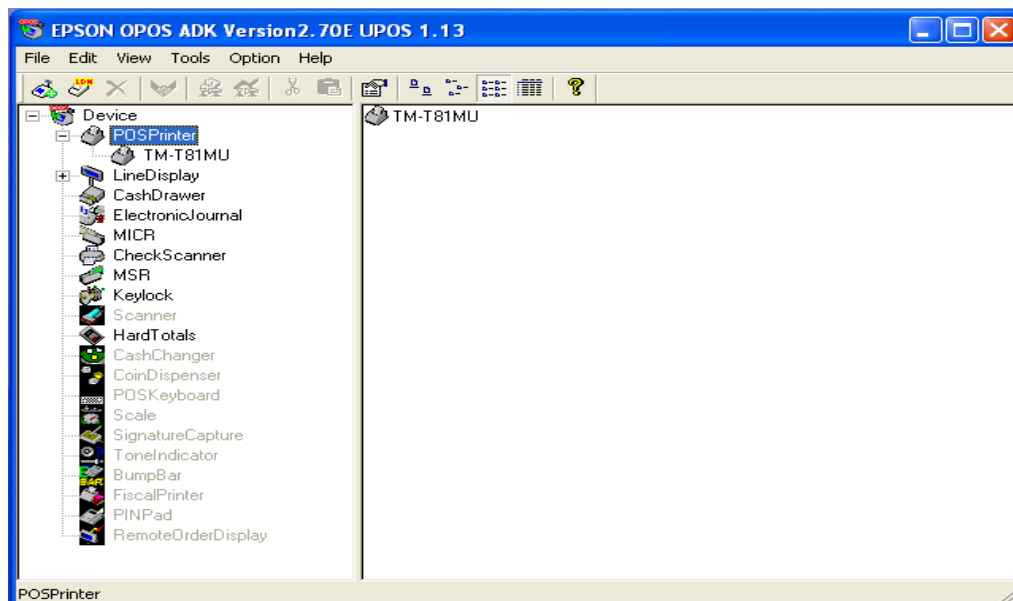


25. Similarly, right click on CashDrawer and then click on Add New Device.

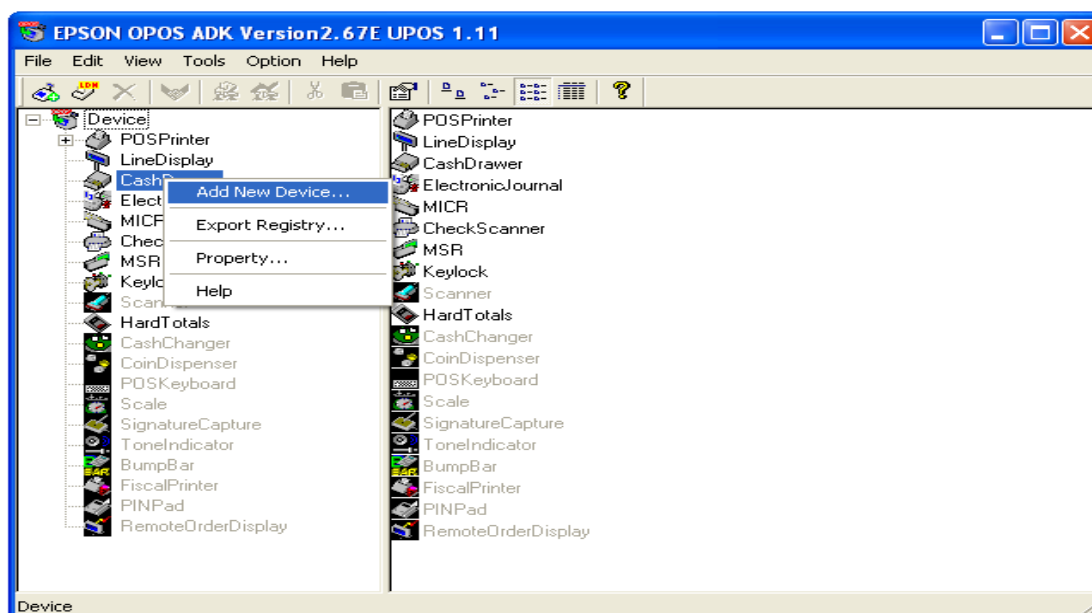

26. Select Multi A from Select Device Name; and from Select detailed model select Multi\_AU option. Then, click on Next.

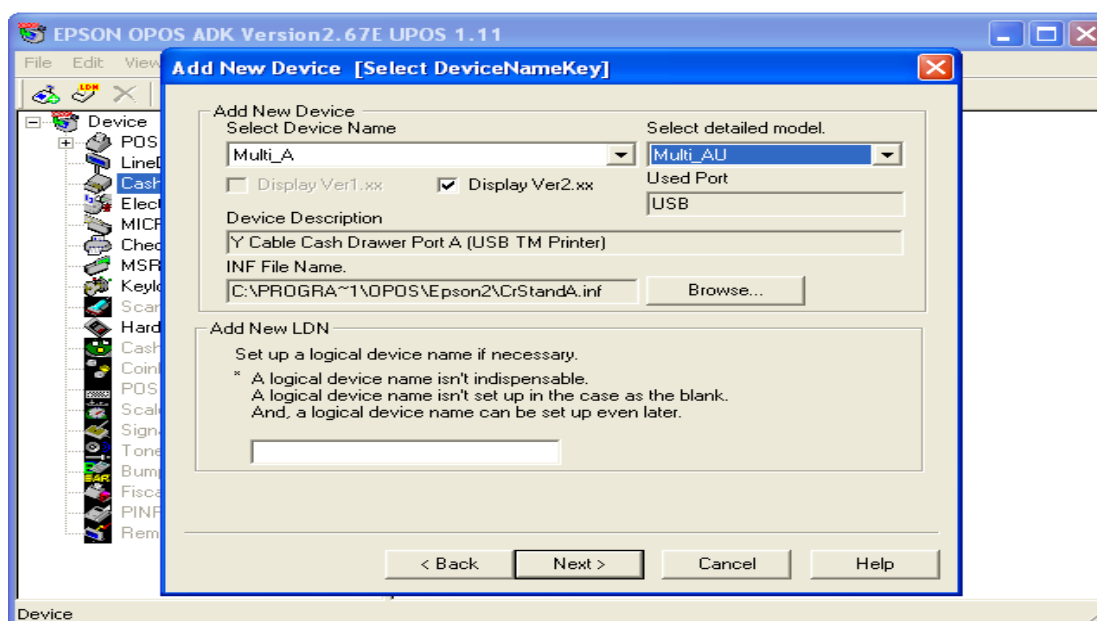

27. Select the printer from the dropdown. In this case its, TM- T81M. And then click on OK.

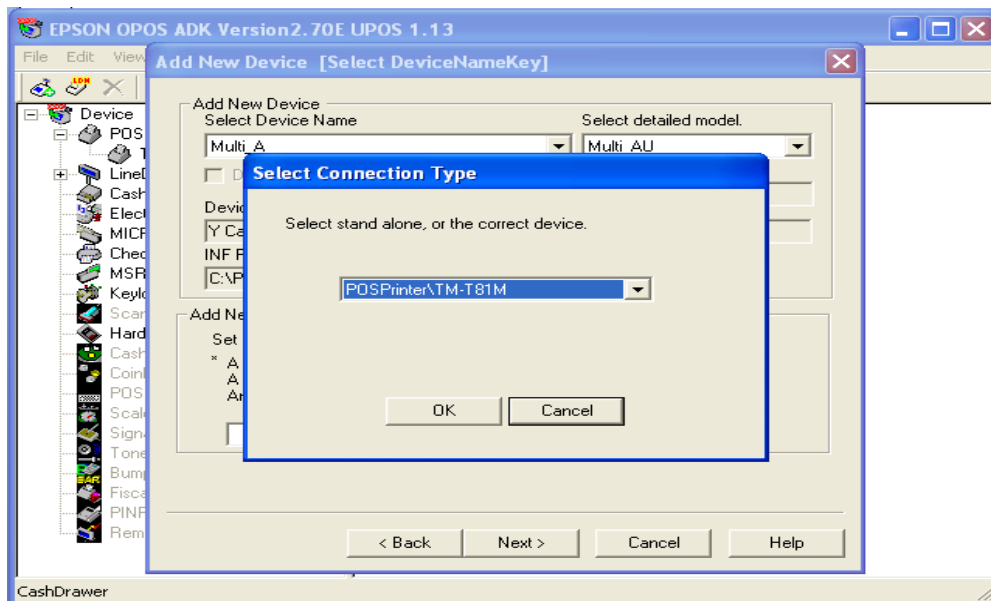


28. Click on HealthCheck Interactive button. And then a window pops up click on start button. HealthCheck successful must be displayed. Cash drawer should pop out.

## Using Printer and Cash Drawer with Corner Store POS:


1. Open Corner Store POS>Set Up>Hardware Set up.



2. Within Hardware Setup select Printers tab. Select Receipt and TM-T81MU.

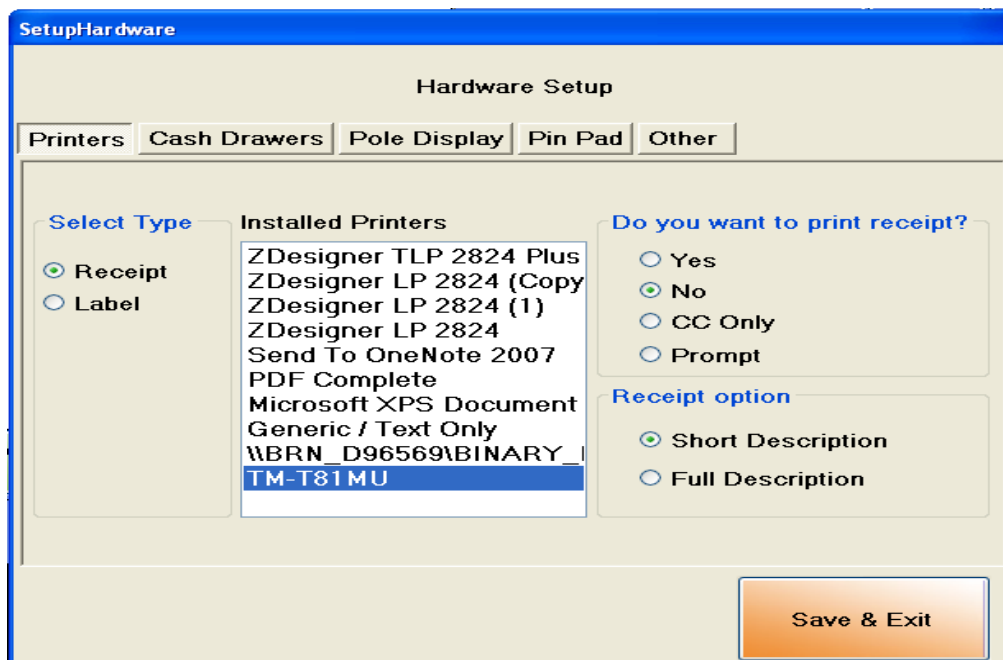

3. Select the option (Yes, No or Prompt) to print the receipt and then select Save & Exit.
4. Select Cash Drawers tab.
5. Select the name of cash drawer which you had added within Installed Cash Drawers list and then select Save & Exit.

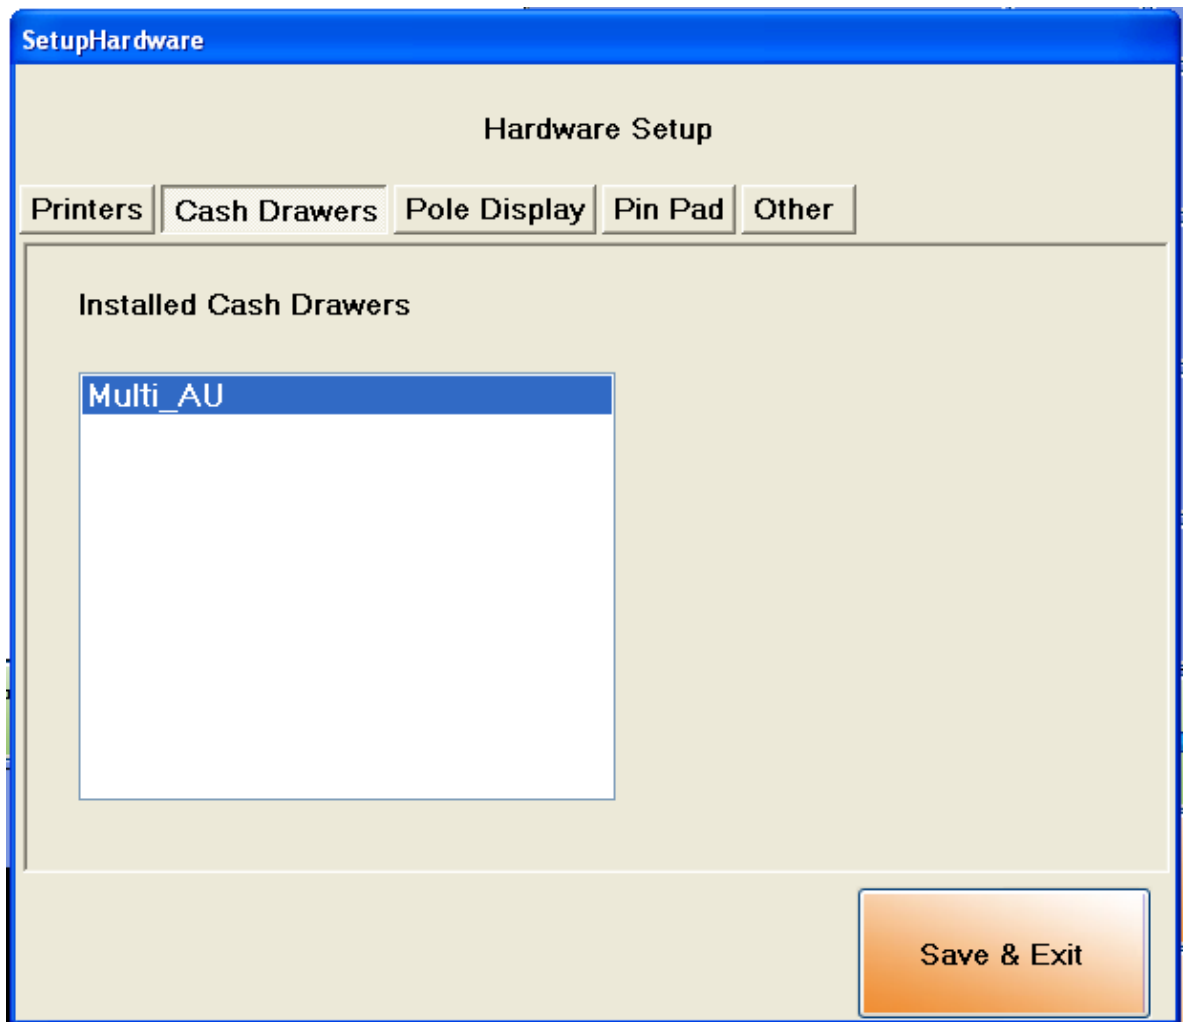

6. To apply changes to take place closed Corner Store and re login.